



Kuva 05 OIL PUMP

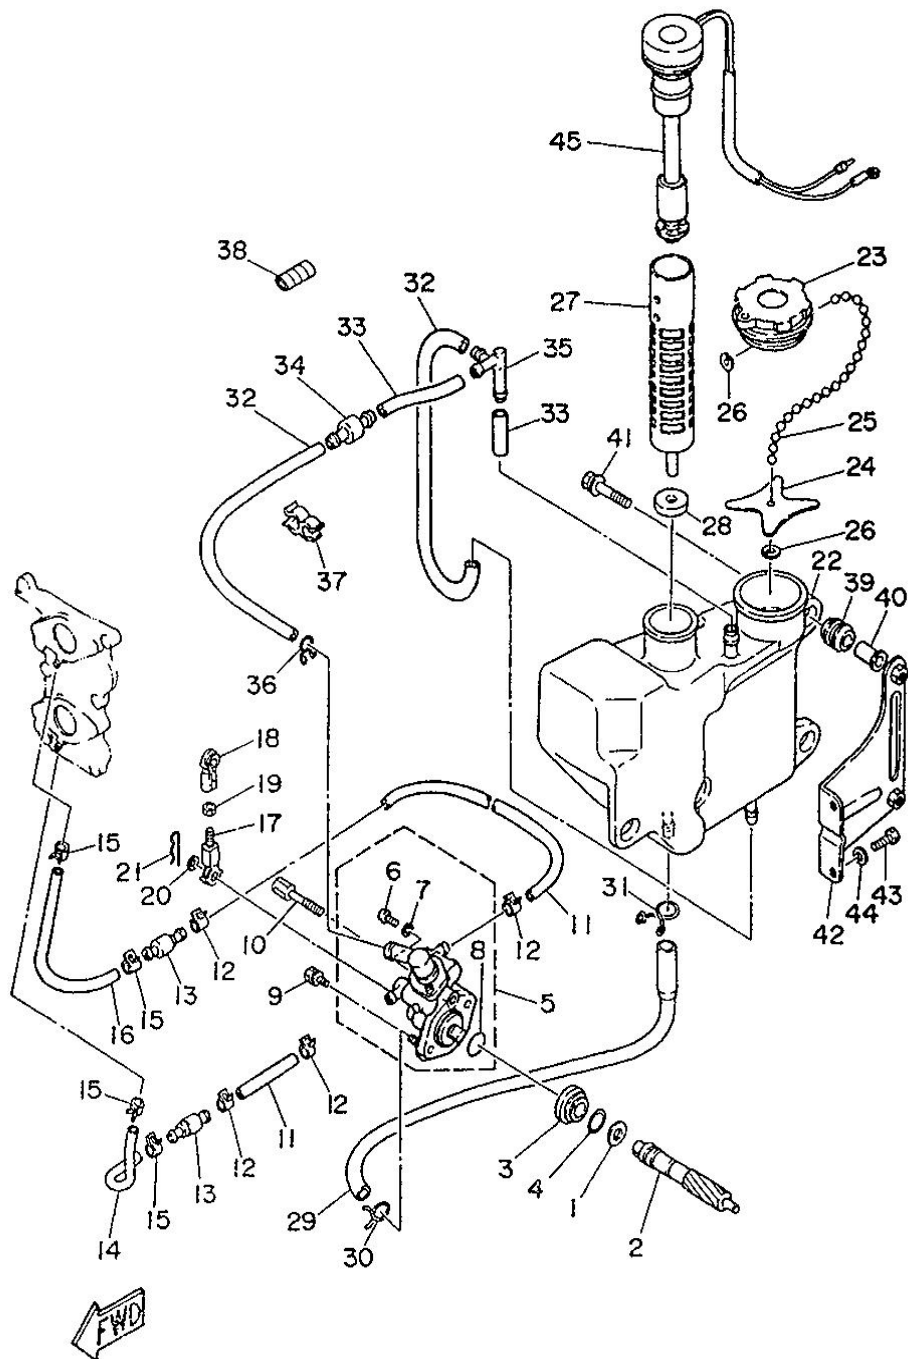

Ref.no	Osanum.	Osan kuvaus		Huom.
1	90201-08M93	WASHER, PLATE	1	
2	6L2-11537-00	GEAR, DRIVEN	1	
3	6J8-13117-00	COLLAR, DISTANCE	1	
4	93210-13595	O-RING	1	
5	6L2-13200-00	OIL INJECTION PUMP ASSY	1	
<hr/>				
6	6L2-13471-00	. PLUG, DRAIN	1	
7	6L2-13475-00	. GASKET	1	
8	93210-19M82	. O-RING	1	
9	97513-05218	BOLT, WITH WASHER	1	
10	90109-05M33	BOLT	1	
<hr/>				
11	90445-07M51	HOSE	2	
12	90468-07M02	CLIP	4	
13	6J8-13183-00	VALVE, CHECK	2	
14	90445-07M04	HOSE	1	
15	90468-07M02	CLIP	4	
<hr/>				
16	90445-07M16	HOSE	1	
17	682-41237-50	JOINT, LINK	1	
18	6H1-41237-00	JOINT, LINK	1	
19	95380-05700	NUT	1	
20	90202-05088	WASHER, PLATE	1	
<hr/>				
21	90468-05M03	CLIP	1	
22	6L2-21707-01	OIL TANK COMP.	1	
23	6H4-21770-00	OIL TANK CAP ASSY	1	
24	6L2-21758-00	WASHER, SPECIAL 2	1	
25	6H1-24633-00	CHAIN, BALL	1	
<hr/>				
26	6H1-21757-00	WASHER, SPECIAL 1	2	
27	6J8-13411-00	STRAINER, OIL	1	

Kuva 05 OIL PUMP

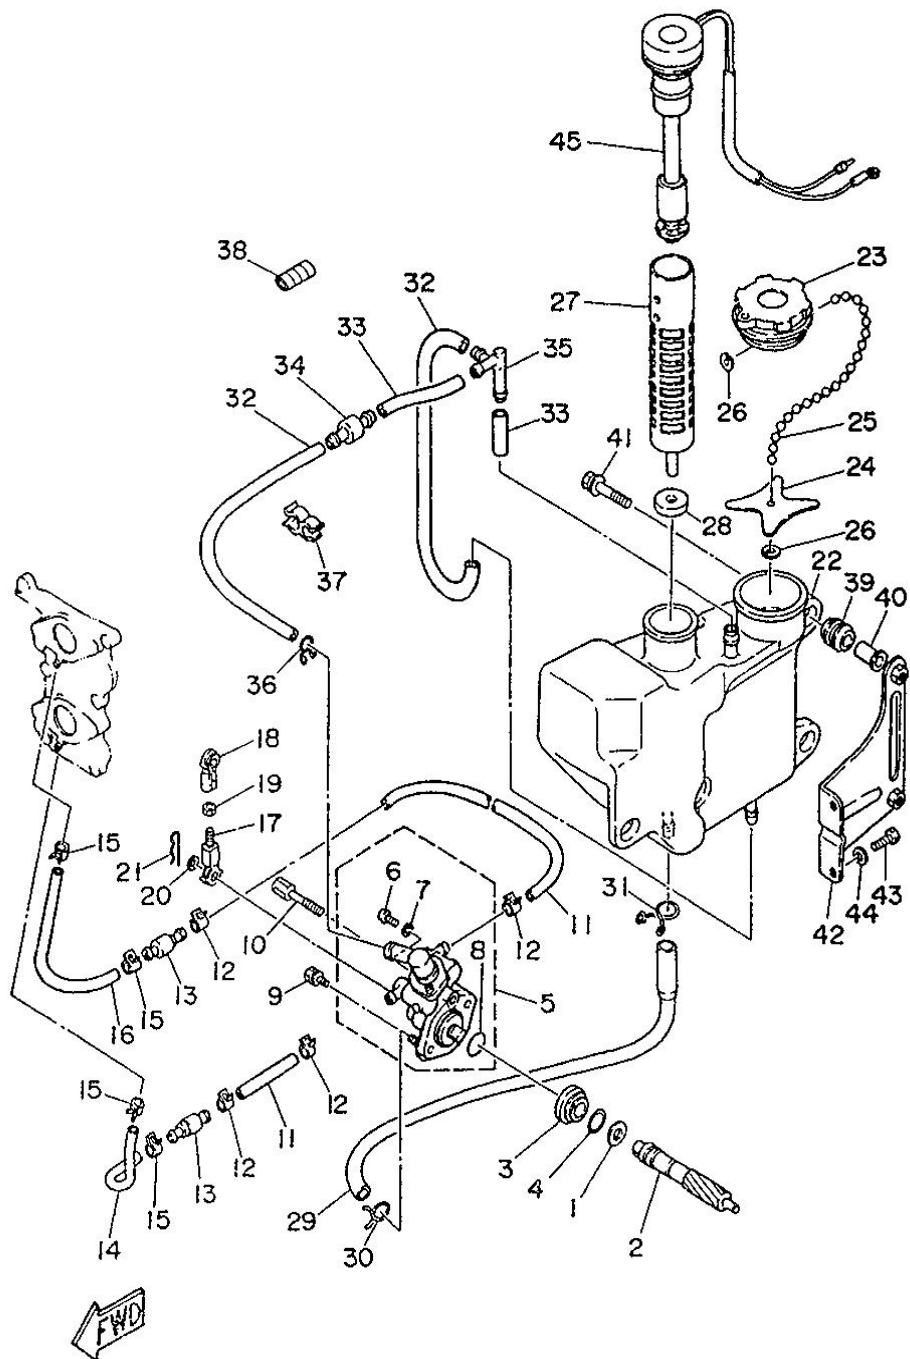

Ref.no	Osanum.	Osan kuvaus		Huom.
28	6J8-13414-00	GASKET, STRAINER COVER	1	
29	6L2-13416-00	PIPE, OIL 1	1	
30	90467-08004	CLIP	1	
31	90467-11M08	CLIP	1	
32	90445-11M03	HOSE	2	
33	90445-11M07	HOSE	2	
34	6J8-21744-00	BREATHER	1	
35	6E5-24376-10	PIPE, JOINT 1	1	
36	90467-10M04	CLIP	1	
37	90464-11M24	CLAMP	1	
38	90446-10M02	HOSE	1	
39	6A0-82317-00	DAMPER, IGNITION COIL	3	
40	624-42542-00	PIPE	3	
41	90119-06M65	BOLT, WITH WASHER	3	
42	6L2-21798-00	BRACKET, DAMPER	1	
43	97313-06016	BOLT	2	
44	92990-06600	WASHER, PLATE	2	
45	6L2-85720-00	OIL LEVEL GAUGE ASSY	1	